


DIGITAL DOOR LOCK USER MANUAL

NX-R1100P  
 NX-R1100C  

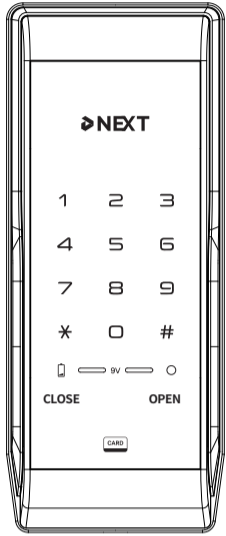

DISTRIBUTOR	NEXT
MANUFACTURER	WIZYOU CO., LTD.
MODEL	NX-R1100P, NX-R1100C
ADDRESS	4304/19 Rama IV Road, Prakhonng, Klongtoey, Bangkok, 10110 Thailand
COUNTRY OF ORIGIN	REPUBLIC OF KOREA
SERVICE CENTER	PLACE OF PURCHASE

Safety Cautions

- WARNING** This section contains important information to ensure the user's safety and prevent potential damage to property. Please read this section carefully and use the product accordingly.
- Do not disassemble the product, as this may cause malfunction and damage the product.
 - Do not expose the product to flammable materials such as gas lighters. It may cause product malfunction.
 - Do not operate the product with wet hands and keep liquids away from the product, as it can disturb an electronic circuit.
 - Do not use the excessive force or remodel the product.
 - Avoid exposure to direct sunlight or high temperature.
 - Do not install the product in direct exposure to rain or snow.
 - Do not use water, benzene or alcohol when cleaning the product, as these fluids can cause product malfunction.
 - Use AA alkaline batteries. Rechargeable batteries may cause product malfunction.


Note

- WARNING**
- Make sure to open the front door and carry an emergency key or card with you when registering passwords for the first time or changing them.
 - The factory default password is "1234". Be sure to change your password after installing the product.
 - Existing passwords will be deleted if the registration mode is changed to general or individual mode. New passwords need to be registered.
 - We are not responsible for any damages caused by password theft.
 - For your safety, we recommend you to use RF-card which the manufacturer provided. Buildone confirms that ISO 14443 Type A certified RF-card and tag to be used with the digital doorlocks. Buildone is not responsible with the cases that customers use other type RF-card and tag, credit card, smart card and mobile phone.


Product Name and Components

Product Name


Outer Body Parts

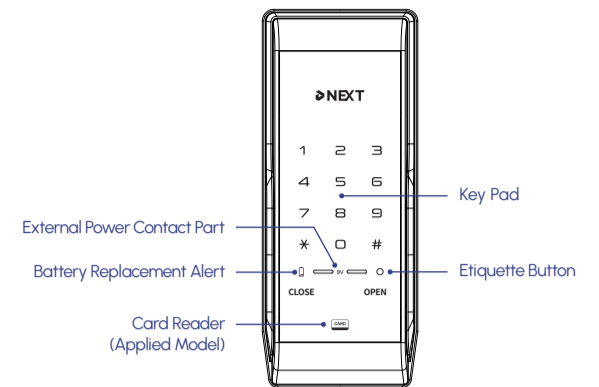

Inner Body Parts

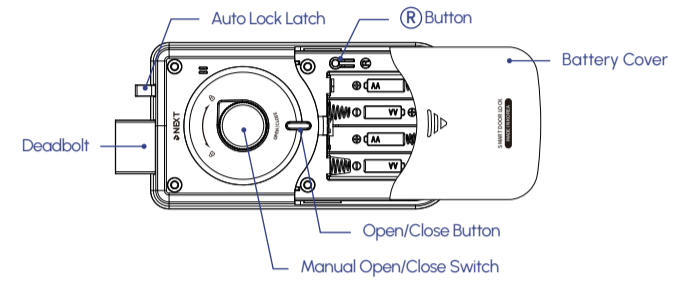

Product Components

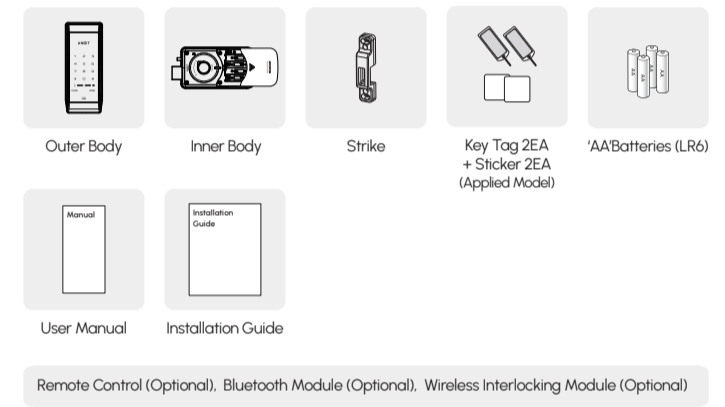

WARNING: BE WELL-INFORMED OF HOW TO OPERATE MANUAL OPEN/CLOSE SWITCH IN CASE OF EMERGENCY

The information of this user manual may vary without any notices to improve the performance of this product.
 1. Voltage: DC 6V
 2. Be sure to correctly match the ends (+/-) when inserting the batteries. Wrong insertion direction or ends of batteries may cause batteries to burst or liquid leakage.
 3. Replace all batteries at the same time and do not mix used batteries with new batteries.
 4. Built-in fire sensor activation temperature: 60°C(±10°C)

How to use

CHECK All registration and setting are activated only when the **door is opened**.


General Registration Mode

Adding User Password (Max. 1 Password)



CHECK
 ※ Existing password will be deleted if a new password is added.

Adding Key Tags (Max. 50 Cards)

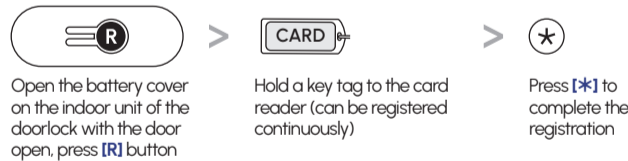

CHECK
 ※ Register all key tags at once, all existing key tags will be deleted if new key tags are registered.

Deleting All Key Tags



Mode Setting

Please note all existing data will be deleted and initialized when changing mode.

CHECK
 ※ Existing intercom and remote control will not be deleted.
 ※ The factory default setting is general registration mode.
 ※ Set 4-12 digit numbers passwords, except [*] and [#].

Changing to General Registration Mode




Changing to Individual Mode



Individual Registration Mode


Individual mode is not recommended except IoT products

Adding User Password (Max. 20 Passwords)

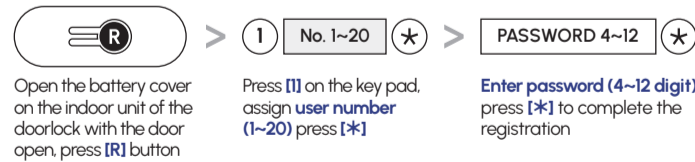

CHECK
 ※ Factory default password for Password #1(Individual mode) is 1234.


Adding Key Tags (Max. 50 Cards)

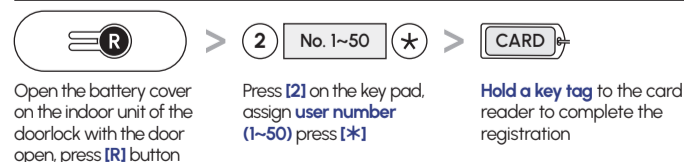

CHECK
 ※ Continuous card registration is not possible in individual registration mode.

Deleting User Password

Deleting a user password

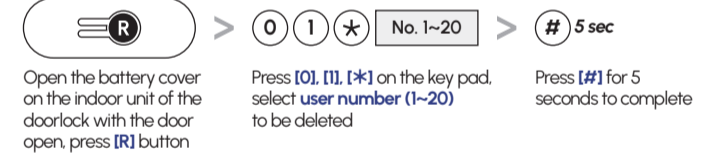

CHECK
 ※ Individual mode Password #1 can not be deleted, recommended to change it before use.


Deleting all user passwords



CHECK
 ※ If all passwords are deleted, default Password #1 is 1234.

Deleting Key Tags

Delete a key tag

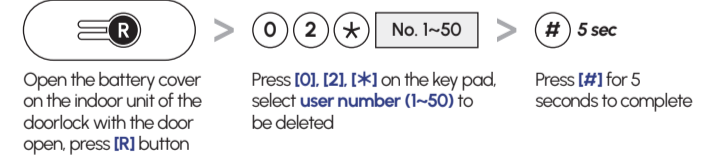

CHECK
 ※ If all passwords are deleted, default Password #1 is 1234.

Delete all key tags

