


DIGITAL DOOR LOCK USER MANUAL

NX-T1100K

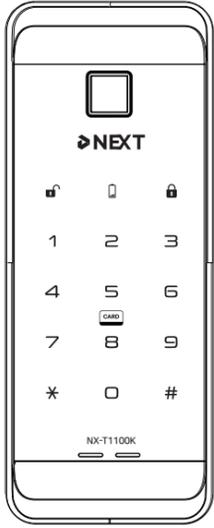

NEXT

DISTRIBUTOR	NEXT
MANUFACTURER	WIZYOU CO., LTD.
MODEL	NX-T1100K
ADDRESS	4304/19 Rama IV Road, Prakhonng, Klongtoey, Bangkok, 10110 Thailand
COUNTRY OF ORIGIN	REPUBLIC OF KOREA
SERVICE CENTER	PLACE OF PURCHASE

Safety Cautions

- WARNING** This section contains important information to ensure the user's safety and prevent potential damage to property. Please read this section carefully and use the product accordingly.
- Do not disassemble the product, as this may cause malfunction and damage the product.
 - Do not expose the product to flammable materials such as gas lighters. It may cause product malfunction.
 - Do not operate the product with wet hands and keep liquids away from the product, as it can disturb an electronic circuit.
 - Do not use the excessive force or remodel the product.
 - Avoid exposure to direct sunlight or high temperature.
 - Do not install the product in direct exposure to rain or snow.
 - Do not use water, benzene or alcohol when cleaning the product, as these fluids can cause product malfunction.
 - Use AA alkaline batteries. Rechargeable batteries may cause product malfunction.


Note

- WARNING**
- Make sure to open the front door and carry an emergency key or card with you when registering passwords for the first time or changing them.
 - The factory default password is "1234". Be sure to change your password after installing the product.
 - Existing passwords will be deleted if the registration mode is changed to general or individual mode. New passwords need to be registered.
 - We are not responsible for any damages caused by password theft.
 - For your safety, we recommend you to use RF-card which the manufacturer provided. Buildone confirms that ISO 14443 Type A certified RF-card and tag to be used with the digital doorlocks. Buildone is not responsible with the cases that customers use other type RF-card and tag, credit card, smart card and mobile phone.


Product Name and Components

Product Name

Outer Body Parts

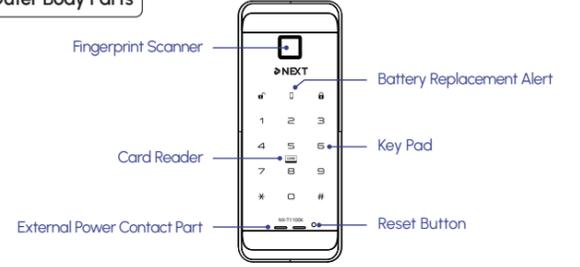

Inner Body Parts

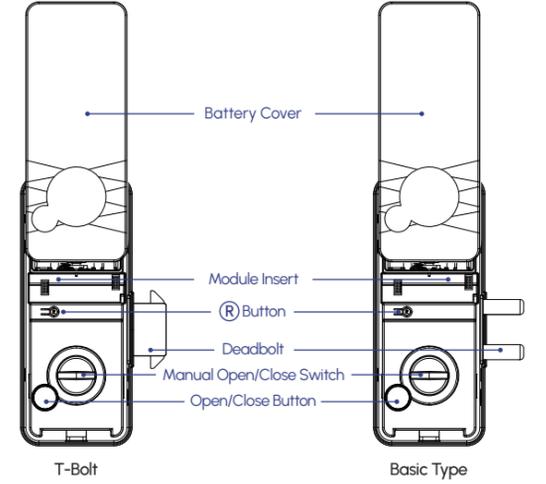

Product Components



WARNING : BE WELL-INFORMED OF HOW TO OPERATE MANUAL OPEN/CLOSE SWITCH IN CASE OF EMERGENCY

NX-T1100K model is without the mechanical keys. May need to break the door lock in case of failure.

- The information of this user manual may vary without any notices to improve the performance of this product.
- Voltage: DC 6V
 - Be sure to correctly match the ends (+/-) when inserting the batteries. Wrong insertion direction or ends of batteries may cause batteries to burst or liquid leakage.
 - Replace all batteries at the same time and do not mix used batteries with new batteries.
 - Built-in fire sensor activation temperature: 60°C(±10°C)

How to use

CHECK All registration and setting are activated only when the **door is opened**.

General Registration Mode

Adding User Password (Max. 1 Password)

Open the battery cover on the indoor unit of the doorlock with the door open, press [R] button

Press [1] and enter **password (4~12 digit)**

Press [*] to complete the registration

CHECK
※ Existing password will be deleted if a new password is added.

Adding Key Tags (Max. 50 Cards)

Open the battery cover on the indoor unit of the doorlock with the door open, press [R] button

Press [2] and hold a key tag to the card reader (can be registered continuously)

Press [*] to complete the registration

CHECK
※ Register all key tags at once, all existing key tags will be deleted if new key tags are registered.

Adding Fingerprints (Max. 100 Fingerprints)

Open the battery cover on the indoor unit of the doorlock with the door open, press [R] button

Press [3], scan a fingerprint on the scanner 3 times (can be registered continuously)

Press [*] to complete the registration

Deleting All Key Tags

Open the battery cover on the indoor unit of the doorlock with the door open, press [R] button

Press [0], [2] on the key pad

Press [#] for 5 seconds to complete

Deleting All Fingerprints

Open the battery cover on the indoor unit of the doorlock with the door open, press [R] button

Press [0], [3] on the key pad

Press [#] for 5 seconds to complete

Mode Setting

Please note all existing data will be deleted and initialized when changing mode.

CHECK
※ Existing intercom and remote control will not be deleted.
※ The factory default setting is general registration mode.
※ Set 4-12 digit numbers passwords, except [*] and [#].

Changing to General Registration Mode

Open the battery cover on the indoor unit of the doorlock with the door open, press [R] button

Enter [0], [#], [1], [4], [7] on the key pad

Press [#] for 5 seconds to complete

Changing to Individual Mode

Open the battery cover on the indoor unit of the doorlock with the door open, press [R] button

Enter [0], [#], [3], [6], [9] on the key pad

Press [#] for 5 seconds to complete

Individual Registration Mode

Individual mode is not recommended except IoT products

Adding User Password (Max. 20 Passwords)

Open the battery cover on the indoor unit of the doorlock with the door open, press [R] button

Press [1] on the key pad, assign **user number (1~20)** press [*]

Enter **password (4~12 digit)** press [*] to complete the registration

CHECK
※ Factory default password for Password #1 (Individual mode) is 1234.

Adding Key Tags (Max. 50 Cards)

Open the battery cover on the indoor unit of the doorlock with the door open, press [R] button

Press [2] on the key pad, assign **user number (1~50)** press [*]

Hold a **key tag** to the card reader to complete the registration

CHECK
※ Continuous card registration is not possible in individual registration mode.

Adding Fingerprints (Max. 100 Fingerprints)

Open the battery cover on the indoor unit of the doorlock with the door open, press [R] button

Press [3] on the key pad, assign **user number (1~100)** press [*]

Scan a **fingerprint** on the scanner 3 times to register

Deleting User Password

Deleting a user password

Open the battery cover on the indoor unit of the doorlock with the door open, press [R] button

Press [0], [1], [*] on the key pad, select **user number (1~20)** to be deleted

Press [#] for 5 seconds to complete

CHECK
※ Individual mode Password #1 can not be deleted, recommended to change it before use.

Deleting all user passwords

Open the battery cover on the indoor unit of the doorlock with the door open, press [R] button

Press [0], [1] on the key pad

Press [#] for 5 seconds to complete

CHECK
※ If all passwords are deleted, default Password #1 is 1234.

Deleting Key Tags

Delete a key tag

Open the battery cover on the indoor unit of the doorlock with the door open, press [R] button

Press [0], [2], [*] on the key pad, select **user number (1~50)** to be deleted

Press [#] for 5 seconds to complete

Delete all key tags

Open the battery cover on the indoor unit of the doorlock with the door open, press [R] button

Press [0], [2] on the key pad

Press [#] for 5 seconds to complete

Deleting Fingerprints

Delete a fingerprint

Open the battery cover on the indoor unit of the doorlock with the door open, press [R] button

Press [0], [3], [*] on the key pad, select **user number (1~100)** to be deleted

Press [#] for 5 seconds to complete

Delete all fingerprint

Open the battery cover on the indoor unit of the doorlock with the door open, press [R] button

Press [0], [3] on the key pad

Press [#] for 5 seconds to complete